



NeoBailerBottom
Preparation and Actuation in Service
(NeoBB)
Document # DRI-0111-0000

NeoBBs are non-explosive systems used to dump NeoSuperSlurry and bridging material from gravity bailing systems.

NeoBB models are available for 1 5/8", 1 3/4", 2", 2 1/8", 2 1/2", 3", 3 1/2", 4" & 5" bailer systems.

Refer to drawings 0111-XXX-001 (where XXX = dia of the gravity bailer sys) to identify features and individual parts of the NeoBB.

1. Secure the NeoBB in a vise. Orient the NeoBB so that it is vertically upright.
2. Obtain a pre-prep'd NeoPigTail (Item #17, NeoProducts P/N 0111-175-091) (a pre-assembled combination of: a) 5" - long 18 - 22 gauge Teflon insulated multi-strand hook-up wire, b) a brass electrical connector crimped onto the wire, and c) a nitrile insulating boot slipped over the brass connector). Place a dab of Dow 111 Silicone Lubricant into the open end of the nitrile boot. Attach the NeoPigTail onto the Electrical Feed Thru (Item #2). Securely tie multiple strands of wax covered flat Nomex string onto the bottom of the nitrile boot to keep it from pulling off the Electrical Feed Thru and to keep wellbore fluid from seeping into the electrical connection.
3. Apply a generous amount of high-temp downhole grease to the threads and seal bore at the top of the NeoBB and to the O-ring (Item #18) on the Top Piston (Item #3).

PURGE ALL GAS FROM THE INTERIOR OF THE TOOL

4. Screw a Hydraulic Pump-in Fixture (Item #16) into the Hydraulic Fill Port. Attach a hydraulic pump filled with a suitable downhole hydraulic fluid to the pump-in fixture. Pump hydraulic fluid into the NeoBB. It is acceptable to quickly pump fluid

	NeoBailerBottom Preparation & Actuation in Service	Date: 01/18/17	Page 1 of 4
		File Number: DRI-0111-0000	Rev. H

into the NeoBB until the O-ring (Item #18) travels out of sight as it engages its mating seal bore at the top of the NeoBB. Note: Do not use Teflon Tape or get the Hydraulic Pump-in Fixture dirty. Doing so can result in a contaminated check valve or and/or solenoid valve and result in replacement with new parts.

5. Then, slowly pump fluid using long slow pumping strokes until gas and fluid begin to sputter from the weep holes, whereupon, you must slow down the pump rate. Pump very slowly using long uniform strokes. Stop pumping once a steady stream of hydraulic fluid is expelled from each weep hole. All the air is now purged from the NeoBB.
6. Inspect all components of the BHA for service worthiness.
7. Make up the BHA from the rope socket down to the CCL.
8. Assemble the top-fill window sub, bailer joints and bottom fill sub (if needed). Measure the length of the bailer system.
9. Obtain suitable 18 – 20 gauge multi-strand downhole hook-up wire with extra-thick Teflon insulation (rated for 1,000 Vdc). Cut the wire to a length that is 24” longer than the length of the dump bailer assembly. This wire will be called the “hot wire”.
10. Makeup the hot wire to a GO tear-drop sub. Run the hot wire through and out the bottom end of the bailer system. Makeup the tear drop sub to the top fill window sub.
11. Pull the “hot wire” taut and cut it 3” – 4” below the end of the bailer pin (or bottom fill sub).
12. Obtain the NeoBB. Hold it close to the bottom end of the bailer system. Using a 3M Scotchlok IDC UY2 Butt Connector, connect the hot wire to the NeoPigTail. Stuff the hot wire into the bailer system and makeup the NeoBB to the bailer system.
13. Check the resistance of the NeoBB (the resistance typically reads 270-320 ohms on surface). Contact NeoProducts if the NeoBB has a resistance out of this range and does not fire properly.
14. Makeup the bailer system to the WL toolstring.

	NeoBailerBottom Preparation & Actuation in Service	Date: 01/18/17	Page 2 of 4
		File Number: DRI-0111-0000	Rev. H

15. Flush out the interior of the bailer system with fresh water before and after every run in the hole.
16. Set up a drip pan to collect hydraulic fluid that will be expelled during the following tool test. Test fire the NeoBB on surface using the following steps:
 - a. Using a V_{dc} power supply, slowly apply DC voltage and ramp up the current to 450-500 milliamps in 4 – 5 seconds,
 - b. Maintain the current for 3 seconds and ramp down to zero.
 - c. Record the threshold current and voltage needed to actuate the tool. Note: Do not exceed 500 milliamps of current.
17. Screw the Hydraulic Pump-In Fixture (Item #16) into the Hydraulic Fill Port. Attach the hydraulic pump to the pump-in fixture and pump into the tool. It is acceptable to quickly pump fluid into the tool until the O-ring (Item #18) enters its' mating seal bore at the top of the NeoBB.
18. Then, slowly pump hydraulic fluid using slow long strokes until fluid begins to sputter air and hydraulic fluid from the weep holes whereupon you should continue to pump fluid until a steady stream of fluid is expelled from each weep hole.
19. Fill the bailer with NeoSuperSlurry cement (or whatever medium is to be dump bailed downhole).
20. Pull the BHA into the lubricator. The BHA may be treated in the same ways as any other gravity bailer system.
21. Perform all subsequent WL and bailing operations per the instructions and protocols of the WL company and operating company.
22. Monitor the BHA weight throughout the descent into the well. Measure and record the line wgt and pick-up wgt just before actuating the NeoBB.
23. Locate the NeoBB so that its bottom end is 1' – 2' above the platform upon which the dump media will reside, actuate the NeoBB using the following steps:
 - a. Slowly ramp up the V_{dc} current to 450-500 milliamps in 4 – 5 seconds,
 - b. Maintain the current for 3 – 5 seconds and ramp down to zero,
 - c. Repeat Steps a & b two more times (minimum of 60 seconds between firing),
 - d. Wait 2 minutes then slowly raise the tool by a length equal to the expected fill height of the dump medium (never yo-yo the bailer system),
 - e. Wait 2 minutes and slowly pull up 20' – 30', and

	NeoBailerBottom Preparation & Actuation in Service	Date: 01/18/17	Page 3 of 4
		File Number: DRI-0111-0000	Rev. H

- f. pull out of the hole per standard safe practice
- 24. The entire bailer system should be examined for service worthiness after every bailer run. Especially, the NeoBB should be thoroughly inspected. Examine the hot wire and the o-ring in the Top Piston for damage and service worthiness.
- 25. Repeat Steps #3 - #5 followed by Steps #15 - #24 if the bailer system is to be run in the hole again. Otherwise, go to the next step.
- 26. Break down the bailer system once bailing operations are complete. Examine the NeoBB for general service worthiness. Attach a label to the NeoBB stating that it must be redressed before returned to service.
- 27. Contact NeoProducts if there appears to be any problems with the equipment or any need for product support.
- 28. Wipe down all bailer system components and stow away until future service.

	NeoBailerBottom Preparation & Actuation in Service	Date: 01/18/17	Page 4 of 4
		File Number: DRI-0111-0000	Rev. H